


WINDOWS 2000

Ensure your camcorder is turned on and connected.


Right-click on the My Computer icon on your desktop and select Manage.

Select Device Manager from the left hand pane and open the Sound, Video and Game Controllers branch.

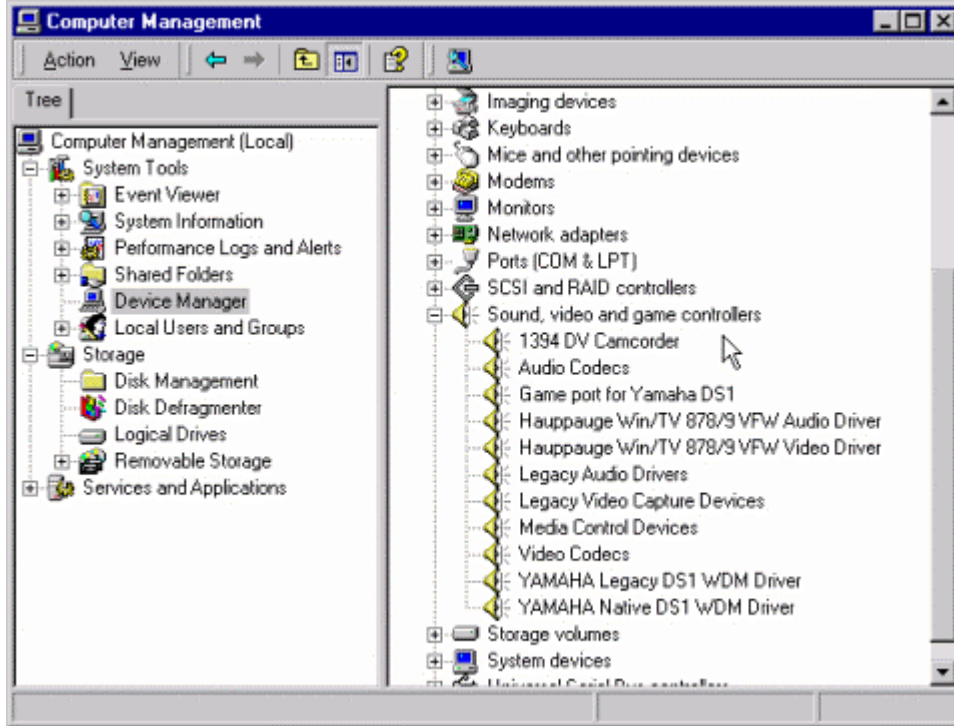


Right-click on the entry named *1394 DV Camcorder* and select properties

Select the Driver tab and click the Update Driver button.

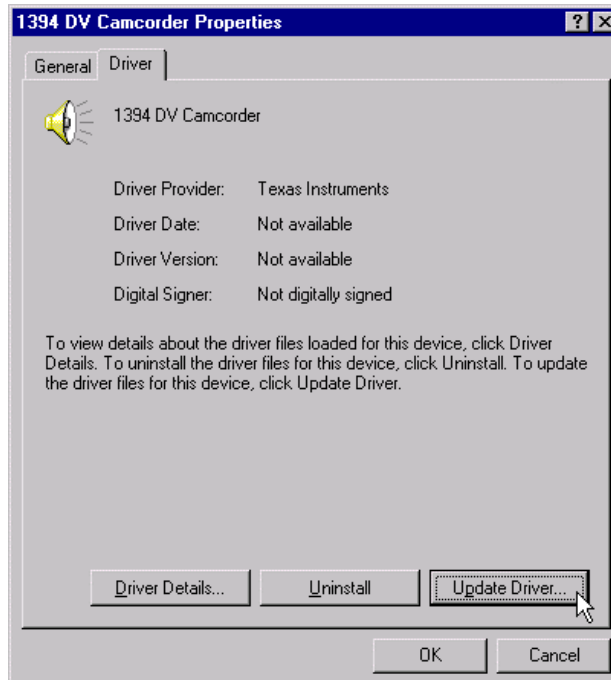

Click Next> from the first page of the Update Device Driver wizard. Select "Search for a suitable driver for my device" and click Next>.

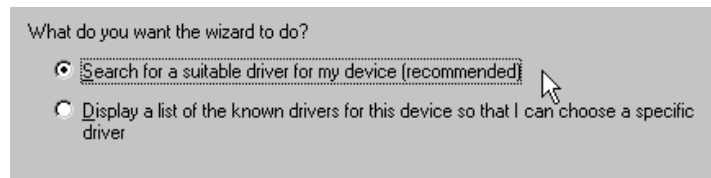


Uncheck all the options from the Locate Driver Files page and click Next>.



After Windows has searched for other drivers, you should have the option of installing another driver. Check the "Install one of the other drivers" checkbox at the bottom of the window. Click Next>.



Select the driver named Microsoft DV Camera and VCR from the list and click Next>.

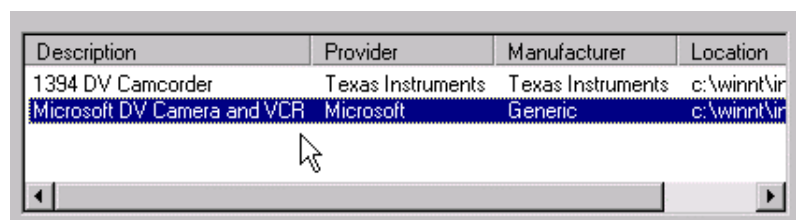

After some time, Windows will have installed the new driver. Click Finish, then close from the Driver Properties dialog to complete the installation.



The Microsoft camcorder driver has now been successfully installed.